

CONTACT RATINGS

20A Res. @ 277 Vac
20A Ball. @ 120/277Vac (N/O)
10A Ball. @ 277Vac (N/C)
10A Tung. @ 120Vac (N/O)
2A Tung. @ 120Vac (N/C)
1 HP @ 120 Vac
2 HP @ 277 Vac
770 VA Pilot @ 120 Vac
1110 VA Pilot @ 277 Vac

COIL INPUT
47 mA @ 30 Vdc
83 mA @ 24 Vac

SENSOR RANGE
0.5-20A, Maximum 20A

 
Functional Devices, Inc.
101 Commerce Drive
Sharpville, IN 46068
Phone: (800) 888-5538

TYPE F, G, EM
For use with
Smoke Control System
General Signaling Equip. NM
Dry Indoor Use



TO SET UP

1. Start load and let stabilize.
2. Turn screw counterclockwise until LED #2 goes ON (may already be ON).
3. Turn screw clockwise until LED #3 goes ON.
4. Turn screw counterclockwise until LED#2 goes ON.
5. For differential, continue turning screw counterclockwise (approx. 30% of current per turn.)

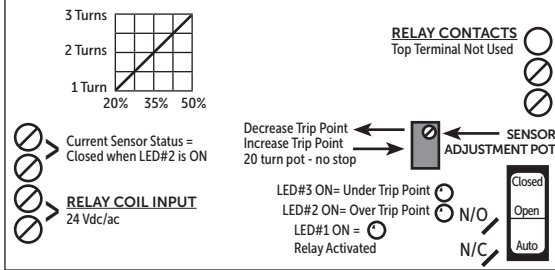

CAUTION: RISK OF ELECTRIC SHOCK - MORE THAN ONE DISCONNECT MAY BE REQUIRED TO DEENERGIZE THE DEVICE BEFORE SERVICING.

CONTACT RATINGS

20A Res. @ 277 Vac
20A Ball. @ 120/277Vac (N/O)
10A Ball. @ 277Vac (N/C)
10A Tung. @ 120Vac (N/O)
2A Tung. @ 120Vac (N/C)
1 HP @ 120 Vac
2 HP @ 277 Vac
770 VA Pilot @ 120 Vac
1110 VA Pilot @ 277 Vac

COIL INPUT
47 mA @ 30 Vdc
83 mA @ 24 Vac

SENSOR RANGE
0.5-20A, Maximum 20A

 
Functional Devices, Inc.
101 Commerce Drive
Sharpville, IN 46068
Phone: (800) 888-5538

TYPE F, G, EM
For use with
Smoke Control System
General Signaling Equip. NM
Dry Indoor Use



TO SET UP

1. Start load and let stabilize.
2. Turn screw counterclockwise until LED #2 goes ON (may already be ON).
3. Turn screw clockwise until LED #3 goes ON.
4. Turn screw counterclockwise until LED#2 goes ON.
5. For differential, continue turning screw counterclockwise (approx. 30% of current per turn.)

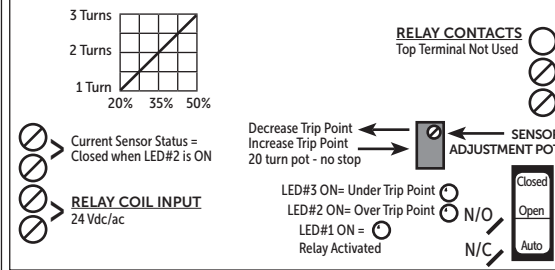

CAUTION: RISK OF ELECTRIC SHOCK - MORE THAN ONE DISCONNECT MAY BE REQUIRED TO DEENERGIZE THE DEVICE BEFORE SERVICING.

CONTACT RATINGS

20A Res. @ 277 Vac
20A Ball. @ 120/277Vac (N/O)
10A Ball. @ 277Vac (N/C)
10A Tung. @ 120Vac (N/O)
2A Tung. @ 120Vac (N/C)
1 HP @ 120 Vac
2 HP @ 277 Vac
770 VA Pilot @ 120 Vac
1110 VA Pilot @ 277 Vac

COIL INPUT
47 mA @ 30 Vdc
83 mA @ 24 Vac

SENSOR RANGE
0.5-20A, Maximum 20A

 
Functional Devices, Inc.
101 Commerce Drive
Sharpville, IN 46068
Phone: (800) 888-5538

TYPE F, G, EM
For use with
Smoke Control System
General Signaling Equip. NM
Dry Indoor Use



TO SET UP

1. Start load and let stabilize.
2. Turn screw counterclockwise until LED #2 goes ON (may already be ON).
3. Turn screw clockwise until LED #3 goes ON.
4. Turn screw counterclockwise until LED#2 goes ON.
5. For differential, continue turning screw counterclockwise (approx. 30% of current per turn.)

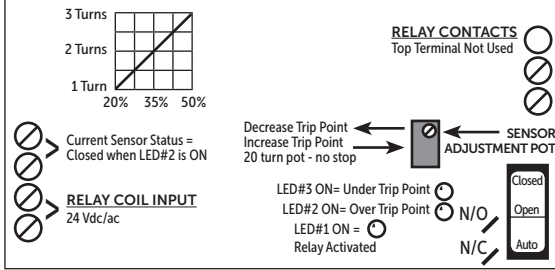

CAUTION: RISK OF ELECTRIC SHOCK - MORE THAN ONE DISCONNECT MAY BE REQUIRED TO DEENERGIZE THE DEVICE BEFORE SERVICING.

CONTACT RATINGS

20A Res. @ 277 Vac
20A Ball. @ 120/277Vac (N/O)
10A Ball. @ 277Vac (N/C)
10A Tung. @ 120Vac (N/O)
2A Tung. @ 120Vac (N/C)
1 HP @ 120 Vac
2 HP @ 277 Vac
770 VA Pilot @ 120 Vac
1110 VA Pilot @ 277 Vac

COIL INPUT
47 mA @ 30 Vdc
83 mA @ 24 Vac

SENSOR RANGE
0.5-20A, Maximum 20A

 
Functional Devices, Inc.
101 Commerce Drive
Sharpville, IN 46068
Phone: (800) 888-5538

TYPE F, G, EM
For use with
Smoke Control System
General Signaling Equip. NM
Dry Indoor Use



TO SET UP

1. Start load and let stabilize.
2. Turn screw counterclockwise until LED #2 goes ON (may already be ON).
3. Turn screw clockwise until LED #3 goes ON.
4. Turn screw counterclockwise until LED#2 goes ON.
5. For differential, continue turning screw counterclockwise (approx. 30% of current per turn.)

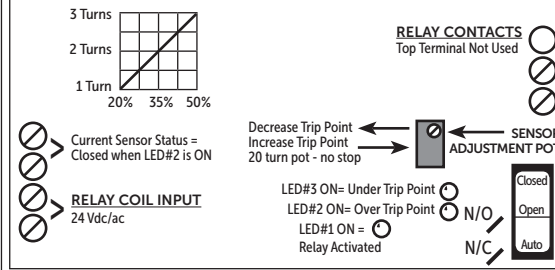

CAUTION: RISK OF ELECTRIC SHOCK - MORE THAN ONE DISCONNECT MAY BE REQUIRED TO DEENERGIZE THE DEVICE BEFORE SERVICING.

CONTACT RATINGS

20A Res. @ 277 Vac
20A Ball. @ 120/277Vac (N/O)
10A Ball. @ 277Vac (N/C)
10A Tung. @ 120Vac (N/O)
2A Tung. @ 120Vac (N/C)
1 HP @ 120 Vac
2 HP @ 277 Vac
770 VA Pilot @ 120 Vac
1110 VA Pilot @ 277 Vac

COIL INPUT
47 mA @ 30 Vdc
83 mA @ 24 Vac

SENSOR RANGE
0.5-20A, Maximum 20A

 
Functional Devices, Inc.
101 Commerce Drive
Sharpville, IN 46068
Phone: (800) 888-5538

TYPE F, G, EM
For use with
Smoke Control System
General Signaling Equip. NM
Dry Indoor Use



TO SET UP

1. Start load and let stabilize.
2. Turn screw counterclockwise until LED #2 goes ON (may already be ON).
3. Turn screw clockwise until LED #3 goes ON.
4. Turn screw counterclockwise until LED#2 goes ON.
5. For differential, continue turning screw counterclockwise (approx. 30% of current per turn.)

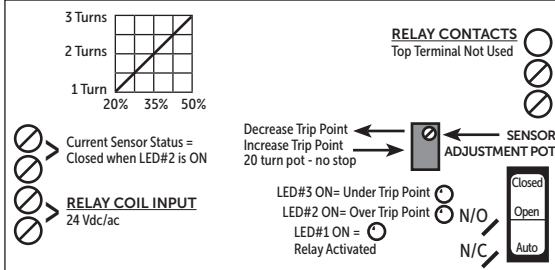

CAUTION: RISK OF ELECTRIC SHOCK - MORE THAN ONE DISCONNECT MAY BE REQUIRED TO DEENERGIZE THE DEVICE BEFORE SERVICING.

CONTACT RATINGS

20A Res. @ 277 Vac
20A Ball. @ 120/277Vac (N/O)
10A Ball. @ 277Vac (N/C)
10A Tung. @ 120Vac (N/O)
2A Tung. @ 120Vac (N/C)
1 HP @ 120 Vac
2 HP @ 277 Vac
770 VA Pilot @ 120 Vac
1110 VA Pilot @ 277 Vac

COIL INPUT
47 mA @ 30 Vdc
83 mA @ 24 Vac

SENSOR RANGE
0.5-20A, Maximum 20A

 
Functional Devices, Inc.
101 Commerce Drive
Sharpville, IN 46068
Phone: (800) 888-5538

TYPE F, G, EM
For use with
Smoke Control System
General Signaling Equip. NM
Dry Indoor Use



TO SET UP

1. Start load and let stabilize.
2. Turn screw counterclockwise until LED #2 goes ON (may already be ON).
3. Turn screw clockwise until LED #3 goes ON.
4. Turn screw counterclockwise until LED#2 goes ON.
5. For differential, continue turning screw counterclockwise (approx. 30% of current per turn.)

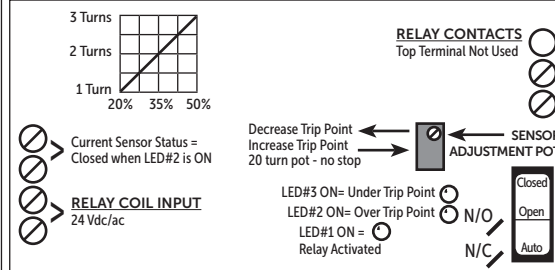

CAUTION: RISK OF ELECTRIC SHOCK - MORE THAN ONE DISCONNECT MAY BE REQUIRED TO DEENERGIZE THE DEVICE BEFORE SERVICING.