

(800) 888-5538

O Service Butto

sales@functionaldevices.com

🕖 www.functionaldevices.com

## **NETWORK COMPATIBLE RELAY / CURRENT SENSOR COMBO**

 $\bigcirc$ 

RED LED = Relay Activi YELLOW LED = Ser

GREEN LED = Network Status

120 Va

0 0

irrent Flow

ED-Cui

Ϊ



2.75" Track Mount LonWorks® Twisted-Pair FT-10 Network Dual I/O Device; One Binary Output (20 Amp Relay SPST + Override); One Binary Input (Current Sensor 0.25 - 20 Amp, Relay Load Sensing), 24 Vac/dc or 120 Vac Power Input

24 Vac/dc

Ø





**SPECIFICATIONS** 

Ø ION

⊘ lon

# Relays & Contact Type: One (1) SPST Continuous Duty Coil Expected Relay Life: 10 million cycles minimum mechanical Operating Temperature: -30 to 140° F
Humidity Range: 5 to 95% (noncondensing)
Operate Time: 18ms
Green LED: Network Status
Red LED: Relay Status
Yellow LED: Service Status
Dimensions: 6.00° x 2.75° x 1.75°
Track Mount: MT212-6 Mounting Track Provided
Approvals: FCC, LonMark®, CE, RoHS UL Listed, UL916, C-UL
Gold Flash: No
Override Switch: Yes

Channel: TP/FT-10 Transceiver Type: FT5000 Smart Transceiver Functional Blocks: 0000 Node Object 0004 Closed Loop Actuator Object 0001 Open Loop Sensor Object Downloadable Files: PDF, XIF, APB, VSS and NXE available on website.



Option 2: Add diode on 24 Vac power (Comm) interconnection between devices. Band on diode faces towards RIB(s).

## Contact Ratings:

CLOSED OPEN AUTO

Not used C

20 Amp Resistive @ 277 Vac 20 Amp Ballast @ 120/277 Vac (N/Q) 10 Amp Ballast @ 120/277 Vac (N/C) Not rated for Electronic Ballast 10 Amp Tungsten @ 120 Vac (N/O) 1110 VA Pilot Duty @ 120 Vac 770 VA Pilot Duty @ 120 Vac 2 HP @ 277 Vac 1 HP @ 120 Vac

Open Loop Sensor Object \*

Internal

Current Sensor

## **Power Input Ratings:**

105 mA @ 24 Vac 78 mA @ 24 Vdc 105 mA @ 120 Vac Current Sensor Range:

0.25 - 20 Amps Threshold fixed at .25 Amps.

## Notes:

 Normally Open or Normally Closed selected by yellow jumper wire.

• When connecting 24 Vac to both the RIB(s) and a half-wave device, damage to device can occur. Option 1: Use separate transformers for each device. **Option 2:** Add diode between devices, see Option 2 note below. ^^

DESCRIPTION	SNVT NAME	SNVT TYPE
Command to open/close relay	nvi Value	SNVT_switch
Command status of relay	nvo Value Fb	SNVT_switch
Default state of relay on/off	nci Default	SNVT_switch
Communication timer	nci Max Receive T	SNVT_elapsed_tm
Status of Binary Input	nvo Value	SNVT_switch
Invert status of Binary Input	nci Invert	SNVT_lev_disc
Max time between updates	nci Max Send T	SNVT_elapsed_tm
Min time between updates	nci Min Send T	SNVT_elapsed_tm

The relay will go to the default state when the communication timer times out. Setting the timer value to zero will cause the communication to never time out.

It is recommended to put a value in nci Max Send T to ensure the RIB re-synchronizes itself on the network after power loss. It is the responsibility of the user to ensure this value does not cause conflicts in network traffic. (No value = No "heartbeat" updates / no re-sychronization; Low Value = Many updates but may cause many traffic collisions; High value = Few updates but many less collisions.)

