


Functional Devices, Inc. 101 Commerce Drive Sharpsville, IN 46068 Toll Free: (800) 888-5538 Office: (765) 883-5538 Fax: (765) 883-7505 Email: sales@functionaldevices.com Website: www.functionaldevices.com

B990

UL924Emergency Lighting and Power Equipment

Example Wiring for ESR2401B

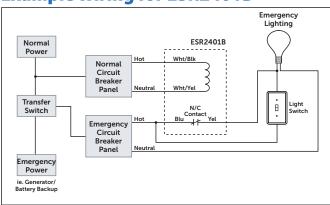

IMPORTANT SAFEGUARD: INSULATE UNUSED LEADS INDIVIDUALLY

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1. Do not use outdoors.
- 2. Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- 5. Do not use equipment for other than intended use.
- 6. Servicing of this equipment should be performed by a qualified service personnel.

SAVE THESE INSTRUCTIONS.

393084Z




Functional Devices, Inc. 101 Commerce Drive Sharpsville, IN 46068 Toll Free: (800) 888-5538 Office: (765) 883-5538 Fax: (765) 883-7505 Email: sales@functionaldevices.com Website: www.functionaldevices.com

B990

UL924Emergency Lighting and Power Equipment

Example Wiring for ESR2401B

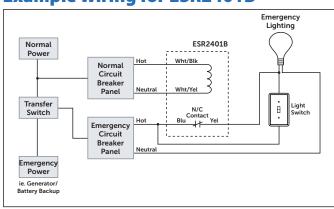


IMPORTANT SAFEGUARD: INSULATE UNUSED LEADS INDIVIDUALLY

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1. Do not use outdoors.
- 2. Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- 4. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- 5. Do not use equipment for other than intended use.
- 6. Servicing of this equipment should be performed by a qualified service personnel.

SAVE THESE INSTRUCTIONS.

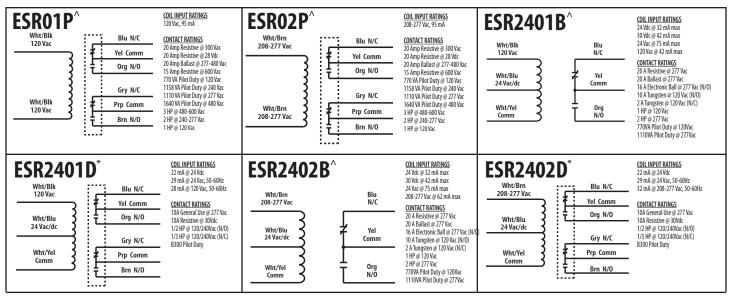

*FOR SUPPLY CONNECTIONS USE #14AWG WIRES OR LARGER RATED FOR AT LEAST 75°C(167°F) ^FOR SUPPLY CONNECTIONS USE #12AWG WIRES OR LARGER RATED FOR AT LEAST 75°C(167°F).

All Vac ratings are 50/60 Hz

